



BW ArmaKit

Fitting Instructions

1. Remove outer sheath and cut wire armour. Cut shroud and slide along the cable. Expose armour wires to approximately the length of the **Cap**. Secure **Assembly A** to the housing.

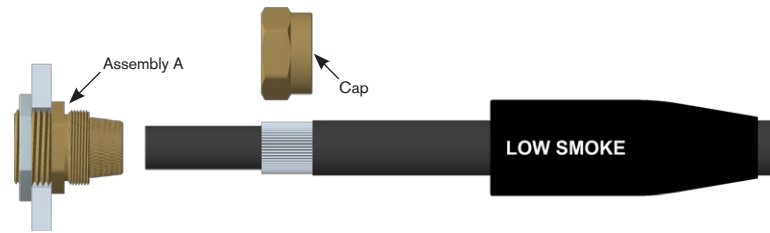

2. Slide the Cap along the cable and splay armour wires to match **Assembly A Cone**.

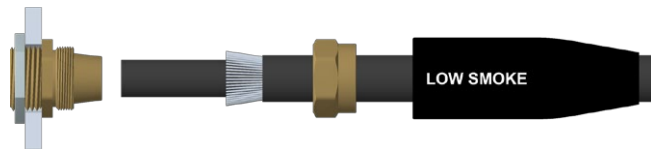

3. Tighten **Cap**.




4. Slide the shroud over the gland to complete installation.




CW ArmaKit

Fitting Instructions


1. Remove outer sheath and cut wire armour. Cut shroud and slide along the cable along with **Assembly B** and **Ring**. Secure **Assembly A** to the housing.

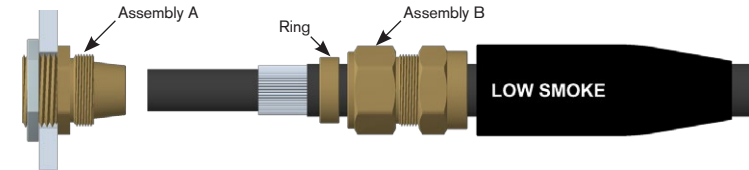


2. Splay armour wires to match **Assembly A Cone**.

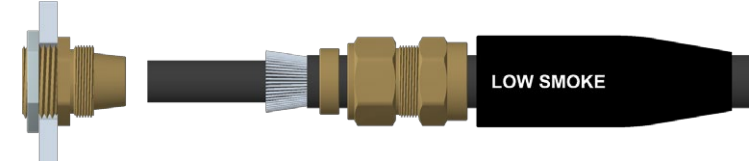

3. Tighten **Assembly B** so the armour wires engage between the Cone and Ring.

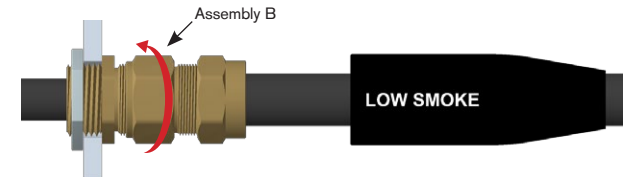

4. Unscrew **Assembly B** and check the armour wires have engaged between the Cone and Ring.

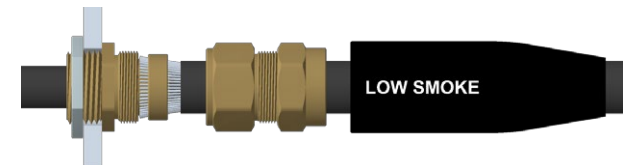

5. Re-tighten **Assembly B**. Using finger pressure tighten the **Cap** until the seal engages with the outer sheath, then further tighten one full turn.

